



Direct Supply®

EZ LOCK TABLET MOUNT™

Owner's Manual

Please keep and refer to this Owner's Manual.

Thank you for purchasing a Direct Supply® EZ Lock Tablet Mount™. Please read this entire guide carefully and keep it for future reference. This guide will provide you with instructions, warranty, and other important information about your Tablet Mount. Share this information with those individuals who will be assembling, using, servicing, and/or cleaning the product to help ensure it is cared for properly.




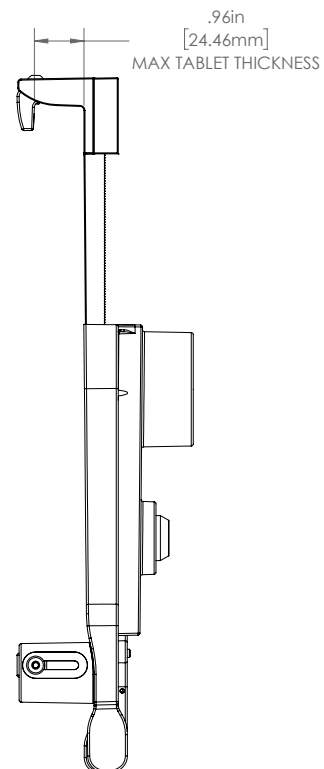


Table of Contents

Device Compatibility	3
Assembly / Adjustment Instructions	4 - 7
Cable Routing	8
Operation	9
Mounting	10
Limited Warranty	11
Customer Service	12

Device Compatibility

The EZ Lock Tablet Mount™ fits most tablets with 8"-12.4" screen size. Please see below to determine if your tablet and case fit within the adjustability range. Always test your tablet's fit within the mounting device before putting it into use.

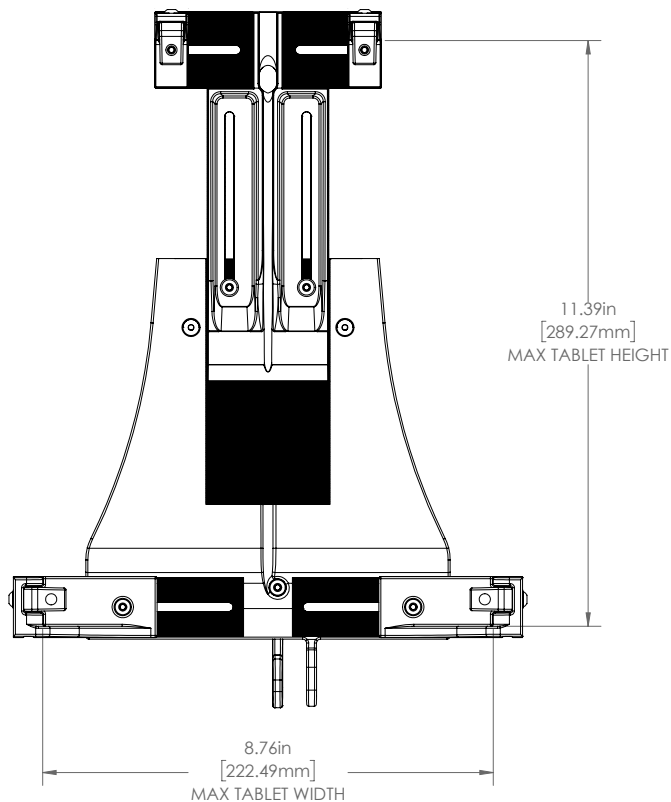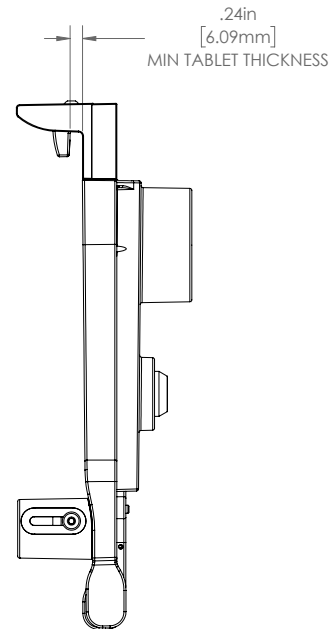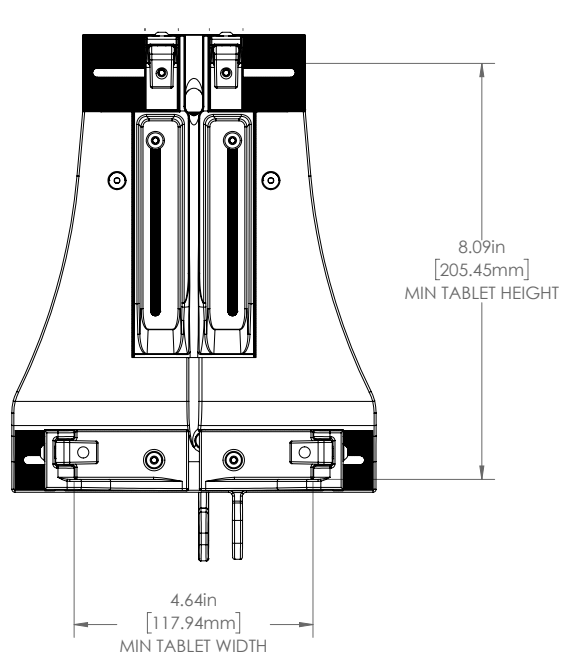

Assembly / Adjustment Instructions

Package Contents

EZ Lock Tablet Mount™ with Key Lock
2 Keys

Tools Needed

2.5mm Hex Wrench
(not included)



1. Ensure the lock on the back of the tablet holder is in the unlocked position. Key pull slot is oriented down. (*figure 1*)

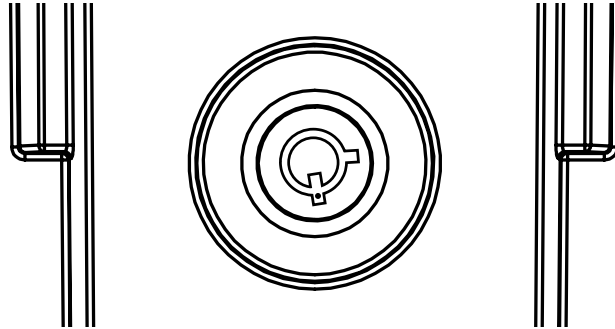


Figure 1

2. Pull the release lever towards the bottom tab to release the center slide into the up or open position. (*figure 2*)

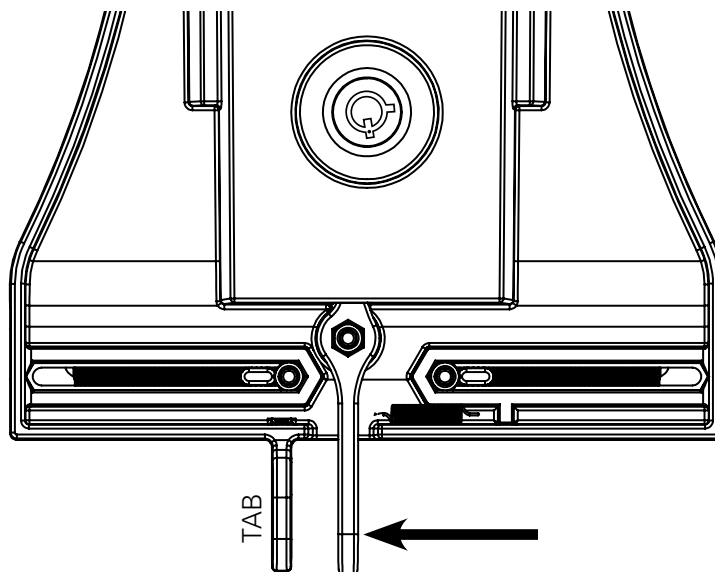


Figure 2

3. Use the hex wrench to loosen the screws on the width, depth, and height adjusters just enough so the components can slide. 10 screws total. *(figure 3)*

NOTE: The screws do NOT need to be fully removed to adjust the position.

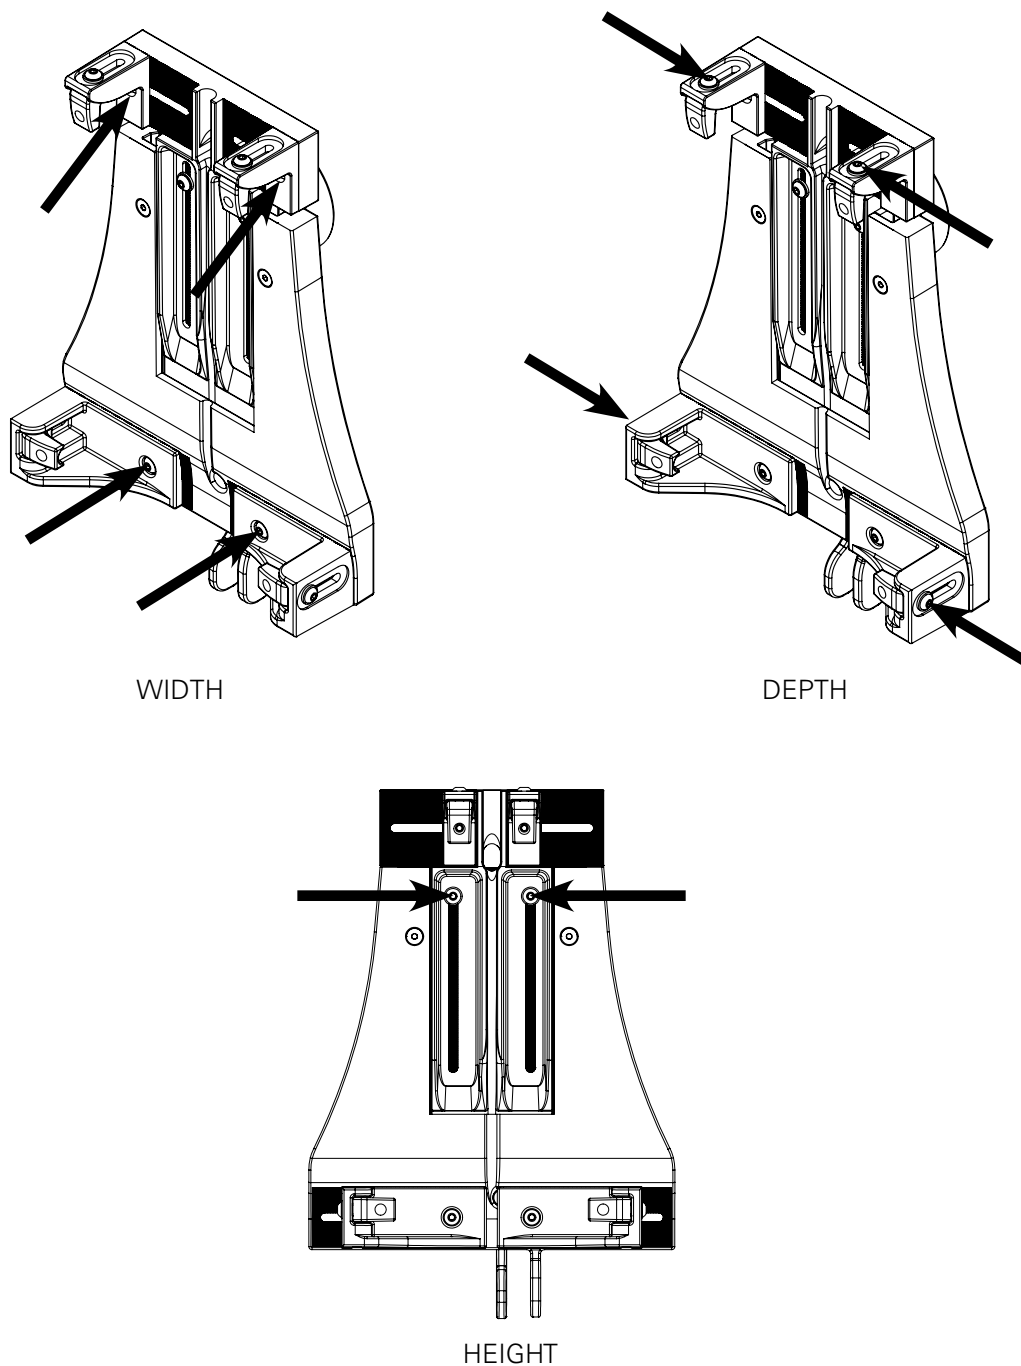


Figure 3

Assembly / Adjustment Instructions *(cont.)*

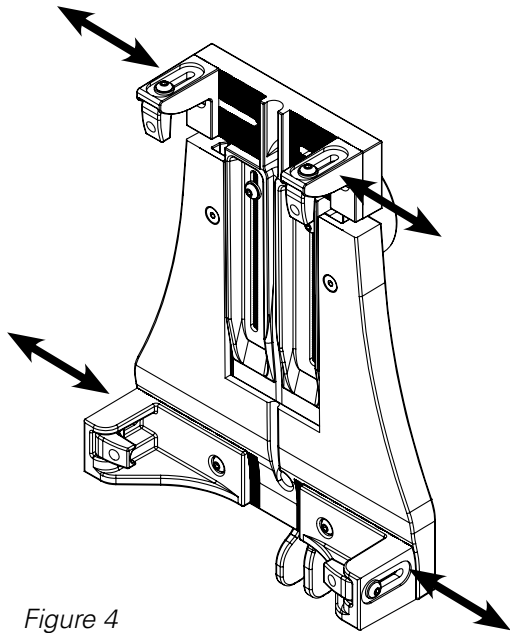


Figure 4

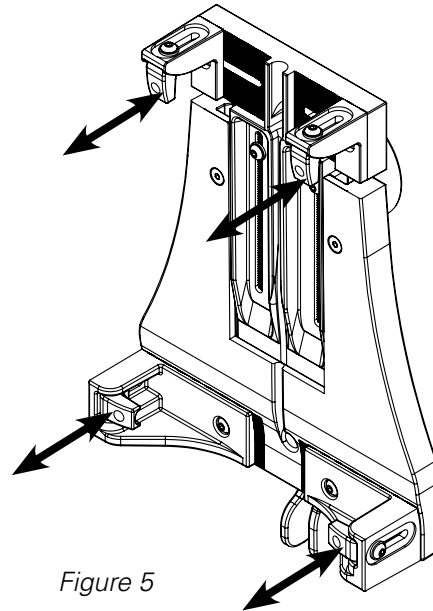


Figure 5

4. Place the tablet in the holder. Move the bottom and top width adjusters left/right to fit the tablet. Ensure the top width adjusters do not interfere with the tablet's buttons, ports, or camera. (figure 4)
5. Move the depth adjusters in/out to fit the tablet. Use the hex wrench to tighten the screws and set the depth position. Do not over-tighten. (figure 5)
6. Remove the tablet from the holder. Use the hex wrench to tighten the screws on the width adjusters and set the width position.
7. Push and click the center slide down into the closed position. (figure 6)
8. Place the tablet back in the holder. Move the height adjuster up/down to fit the tablet. (figure 7)

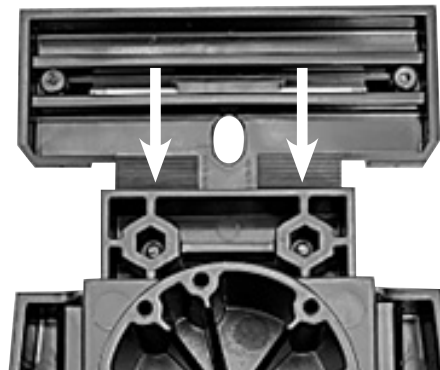


Figure 6

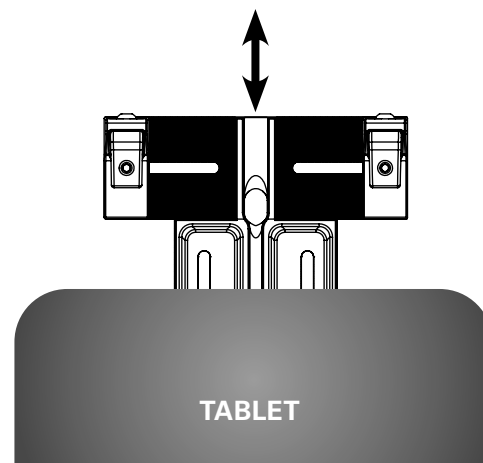


Figure 7

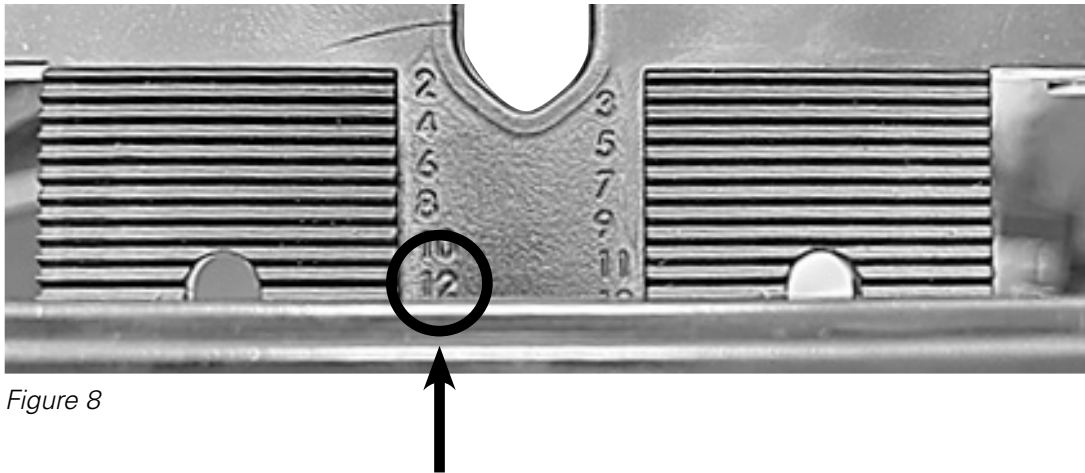


Figure 8

9. On the back side of the height slider, review the numbers shown in the middle. Take note of the lowest number that is fully visible. This reference is the height position for your tablet and will help in the next step. (figure 8)

NOTE: In this example, the lowest fully visible number is 12.

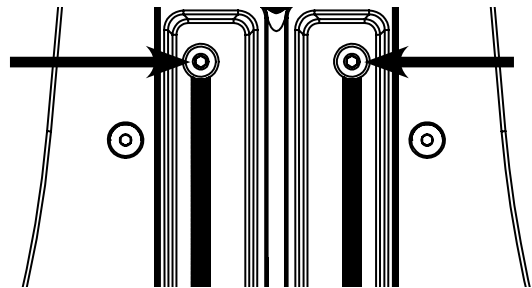



Figure 9

10. Pull the release lever towards the bottom tab to open the center slide and remove the tablet. Set your height adjuster to the desired setting using the reference number from step 9.
11. Turn the tablet holder over. Using the hex wrench, tighten the two screws on the height adjuster to set the height position. Your EZ Lock Tablet Mount™ is now adjusted to fit your tablet. (figure 9)

Cable Mounting

The EZ Lock Tablet Mount™ has a channel to route your tablet's charging cable.

- Guide the cable from your power source through the hole in the top height adjuster from back to front.
- Place the cable in the center channel and direct to the charging port on your tablet. Do this prior to locking the tablet in place.

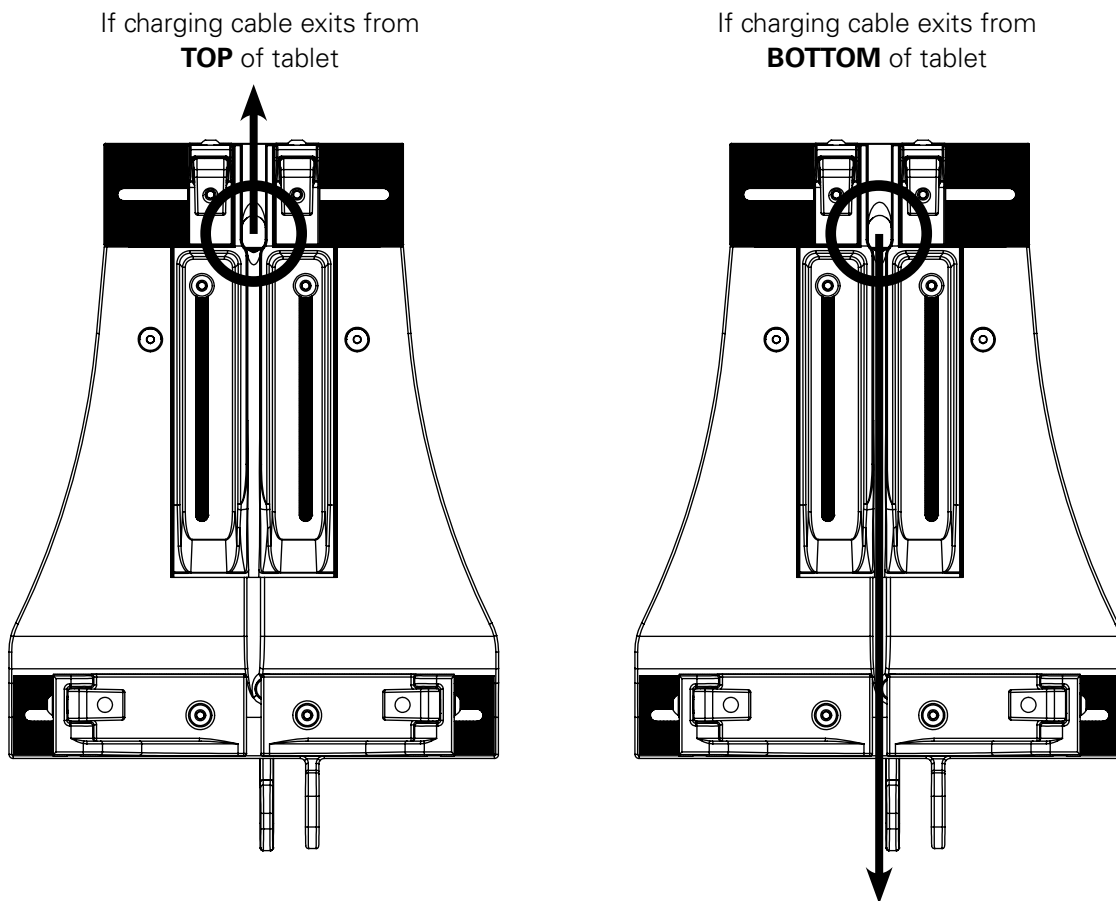


Operation

- To install your tablet in the EZ Lock Tablet Mount™, ensure it is first adjusted to the proper size.
 - Pull the release lever towards the bottom tab to release the center side to the open position.
 - Route the charging cable in the channel behind the tablet if desired. Place the tablet in the holder.
 - Push and click the center slide down into the closed position.
 - To lock the tablet in the holder, insert the key in to the lock and turn to the locked position (key pull slot is oriented to the right).
 - To verify the tablet is locked in place, attempt to pull the bottom lever. If locked, the center slide will not fully release to the open position.
- ⚠ CAUTION:** Pulling the release lever while the tablet holder is locked will put extra strain on the lock mechanism. Push and click the center slide back down to reduce strain on the lock and extend usability of the device.
- To remove the tablet from the holder, insert the key into the lock and turn to the unlocked position (key pull slot is oriented down). Pull the bottom lever to release the center slide.

Mounting

The EZ Lock Tablet Mount™ has two sets of holes on the back side of the base to attach additional mounting components or accessories (screws not included for mounting).

- 35mm x 35mm square pattern
- 30mm x 38mm 4-Hole AMPS pattern

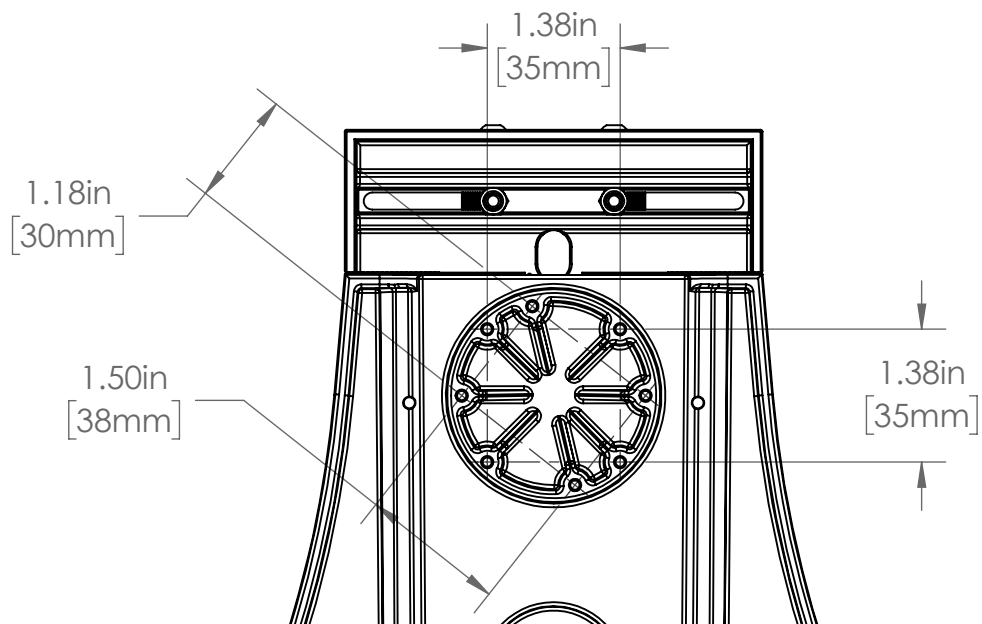

Limited Warranty

We offer to you, as the original purchaser, a warranty for the Direct Supply® EZ Lock Tablet Mount™. Our warranty applies for the limited warranty period stated below. If any device or device part listed below is defective in material or workmanship during the applicable limited warranty period, we will repair or replace it at our cost. Please note that the decision to repair or replace a device or device part will be at our discretion. Our warranty applies only if the device is properly maintained by the original purchaser for normal, indoor use and does not cover normal wear and tear, modification of the device, or damage caused by abuse, improper use, failure to maintain, use which exceeds the published device limitations, or the combination of any device with another product. In addition, our warranty does not cover fading, characteristics or natural variations in fabric, texture, colorfastness, stains, spills, or exposure to chemicals, odors, heat, or light. In certain cases, we may provide you repair or adjustment instructions and/or replacement parts and ask you to perform a repair or adjustment or replace a defective part.

Our warranty gives you specific legal rights, and you may also have other rights, which vary, from state to state. Please note that our limited warranty period begins when we ship the device to you. The limited warranty period and our obligations under the warranty end once you transfer the device to someone else, or at the end of the applicable limited warranty period identified below, whichever is earlier.

Product/Part	Warranty Period (Parts)	Anticipated Usable Device Life
EZ Lock Tablet Mount™	1 year	3 years

Anticipated Usable Device Life is based on normal use with proper maintenance, cleaning, and storage. You should still inspect, monitor, and care for the device as described in this guide, as the device may need to be replaced sooner than anticipated in particular situations.

DIRECT SUPPLY MANUFACTURING, INC. MAKES NO IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE; THESE AND ALL OTHER IMPLIED WARRANTIES ARE SPECIFICALLY DISCLAIMED. DIRECT SUPPLY MANUFACTURING, INC. WILL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES THAT MAY RESULT FROM THE DEVICE OR YOUR USE OF OR INABILITY TO USE THE DEVICE. TO THE EXTENT ALLOWED BY LAW, OUR TOTAL LIABILITY TO YOU, IF ANY, IS LIMITED TO THE PRICE OF THE DEVICE OR SERVICE GIVING RISE TO YOUR CLAIM. Some states do not allow an exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. If implied warranties are not excluded, and to the extent allowed by law, we limit any and all implied warranties to the applicable warranty period identified above. Except for rights under any applicable state law, the remedies provided under this warranty are your sole and exclusive remedy for any breach of our warranty and state the entire limit of our responsibilities.

Customer Service

If you have any questions about the EZ Lock Tablet Mount™ you have purchased or would like to request warranty service, please contact your distributor.



DirectSupply.com

APTURA / EQUIPMENT & FURNISHINGS / DSSI / TELS

Distributed by Direct Supply Manufacturing, Inc. 6635 N Industrial Road, Milwaukee, WI 53223.

© 2022 Direct Supply Manufacturing, Inc. All Rights Reserved. Direct Supply®, and all associated logos are the registered trademarks of Direct Supply, Inc., used under license. All other trademarks are the property of their respective owners.